

Operational Manual

Standard Box Color Camera





Please read the Operational Manual before attempting to use this product.

FEATURES

- 1/3" Sony Super HAD CCD
- 420 TV Lines
- 0.2 Lux @ F1.2
- Lead (Pb) Free RoHS Compliance
- Long life and high reliability are achieved by the use of CCD imaging device. This makes the camera 100% solid state.
- 12V DC / 24V AC

DIMENSIONS (Unit: mm)

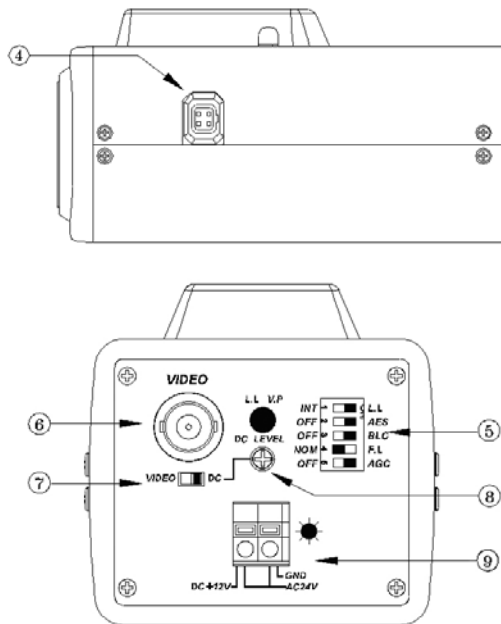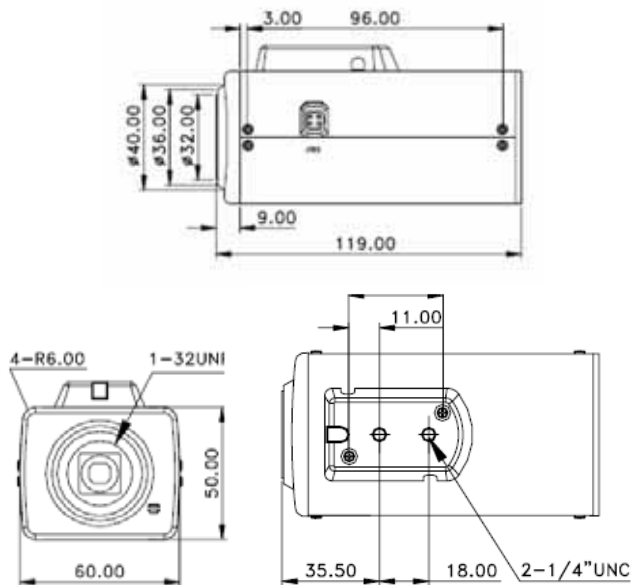

1. Lens mount

This mount is used to install a CS-mount lens. CS-adaptor ring is required if use a C mount lens.

2. Camera mounting screw holes

Screw hole for fixing camera.

3. Mount Adaptor

This adaptor can be attached to either the top or bottom of the unit.

4. Auto Iris Lens Connector (4-pin type)

The lens connector supplies the auto iris lens (not supplied) with DC power and a video signal or DC control signal.

PIN NO.	VIDEO	DC
1	DC + 12V	CONTROL -
2	NC	CONTROL +
3	VIDEO SIGNAL	DRIVE +
4	GND	DRIVE -

5. Control Switch

- SW1. SYNC MODE: SYNC Mode Selection INT/L.L. switch.
- SW2. AES: Automatic Electronic Shutter OFF/AES switch.
- SW3. BLC: Back Light Compensation OFF/BLC switch.
- SW4. F.L: Flickerless NOM/F.L switch.
- SW5. AGC: Automatic Gain Control OFF/AGC switch.

6. VIDEO connector

This is an output for connection to a video monitor, etc (75Ω).

7. Iris mode selection switch

Used to choose DC or VIDEO mode according to the type of your lens.


8. DC Level adjustment V.R.

Used to adjust video output level of DC driven auto iris lens.

9. Power input terminal

Connect the power supply of 12V DC / 24V AC.

NOMENCLATURE AND FUNCTION

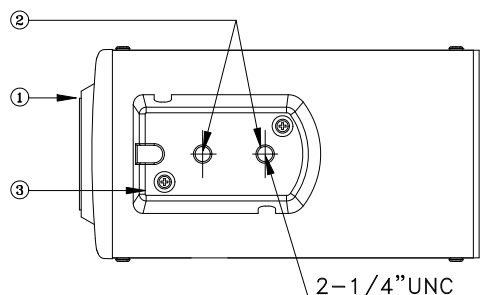

CONTROL SWITCH OPERATION

SW1. SYNC MODE: INT MODE: The camera may be operated independently with its internal crystal control. L.L. MODE: This version w/o L.L. function.

SW2. AES: AES: The automatic electronic shutter control 1/60(1/50) ~ 1/100.000 sec. is employed for using a manual Iris Lens.

SW3. Example of Back Light Compensation: When the object is dark by strong light (sun illumination etc) as (Fig 3-1). Please turn on BLC switch. The object becomes as (Fig 3-2).

INT → ☐ L.L.
 OFF → ☐ AES
 OFF → ☐ BLC
 NOM → ☐ F.L.
 OFF → ☐ AGC

AES-ON
BLC-OFF



Fig3-1

INT → ☐ L.L.
 OFF → ☐ AES
 OFF → ☐ BLC
 NOM → ☐ F.L.
 OFF → ☐ AGC

AES-ON
BLC-ON



Fig3-2

SW4. F.L. (Flickerless): F.L: Fixes shutter speed at NTSC: 1/100 Sec.; PAL: 1/120 Sec. When using this switch, set "AES" OFF. NOM: Normal position.

SW5. AGC: AGC: level varies from 0 to 26dB. OFF: AGC level is fixed at 0 dB.

SPECIFICATIONS

Model	SST-7420	SST-7420P
TV System	NTSC	PAL
Image Sensor	1/3" Sony Super HAD CCD	
DSP	Sony	
Total Pixels	537(H) x 505(V)	537(H) x 597(V)
Video Output	1.0Vp-p Composite / 75 ohms	
Resolution	420 TV Lines	
Minimum Illumination	0.2 Lux @ F1.2	
Scan System	2:1 Interlace	
S/N Ratio	More than 50dB (ACG OFF)	
Electronic Shutter Speed	AES ON: 1/60~1/100,000sec AES OFF: 1/60sec	AES ON: 1/50~1/100,000sec AES OFF: 1/50sec
Synchronization	Internal	
Back Light Compensation	ON / OFF Switchable	
Auto Gain Control	ON / OFF Switchable	
Flickerless	ON / OFF Switchable	
Lens Mount	CS/C (with Adaptor)	
Auto Iris Control	DC / Video Switchable	
Power Supply	12V DC / 24V AC	
Power Consumption	145mA / 1.7W	
Operation Temperature	14°F ~ 122°F / -10°C ~ +50°C	
Operation Humidity	RH 85% or less	
Storage Temperature	-4°F ~ 140°F / -20°C ~ +60°C	
Dimension	2.36"(W) x 1.97"(H) x 4.69"(L) 60mm(W) x 50mm(H) x 119mm(L)	
Weight	0.88lbs / 400g	

*Specifications are subject to change without notice

LIST OF COMPONENTS

- One (1) SST-7420/SST-7420P Camera
- One (1) Allen Wrench
- One (1) CS Adaptor Ring
- One (1) Operational Manual

* For any returns, please include all components listed above with original packaging in **Resalable Condition**. **Absolutely No Returns** will be accepted if any component is missing/damaged or if any cable is cut or tampered with.



CAUTION

1. Never point the camera toward the sun

Do not expose the lens directly to the sun or to strong light as this may damage the pick-up device.

2. Handle this camera with care

Avoid any shock or bumping of the camera. Improper handling could damage the camera.

3. Requires a proper operating environment

This camera is designed for indoor use. The allowable temperature range for operation of this camera is between 14°F ~ 122°F / -10°C ~ +50°C and the allowable humidity is 85%RH maximum.

4. Clean the front face to the pick-up device

It is recommended that the pick-up device surface be cleaned before lens installation or whenever the lens is changed. Cleaning should be done by using a chamois, a very fine soft cloth, lens tissue, or cotton tipped applicator and ethanol to carefully remove any fingerprint or dust.

5. Check the power source voltage

The power source voltage should be within the specified range. (Camera must meet the specifications). Camera must be connected to a surge protector at all times.

6. Objects and liquid entry

Never push objects of any kind into this camera as this may touch dangerous voltage points of short out parts that could result in a fire or electric shock. Never spill any kind of liquid on the video product.

7. Servicing

Do not attempt to service this video product by yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all service to qualified servicing personnel.

8. Damage requiring service

Unplug this video product from the wall outlet and refer service to qualified servicing personnel under the following conditions:

- When the power supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.
- When the video product exhibits a distinct change in performance.



WARRANTY

OK-I USA products are covered under warranty for one year from the date of purchase. The warranty will automatically be voided if any of the following occurs:

1. Camera sticker is removed

If the camera sticker is removed, we will not be able to confirm any information regarding when and where the product was purchased. We have no other way to verify the purchase record without the serial number on the camera sticker; therefore, it should not be removed.

2. Camera is modified in any way

If the camera is scratched, damaged, or modified in a manner not described in this manual, the warranty will be voided immediately. It is the customer's responsibility to keep the camera in good condition.

3. Video or power cable is cut

The video cable and the power cable should not be tampered with. Cutting or modifying of the cables will result in termination of the warranty.